


**STEP 1**

INSTALL LOCKING SYSTEM IN CASE AND INSTALL WEDGES ON THE DRAWER SIDES


- DO NOT INSTALL PINS FOR DRAWERS AT THIS TIME -

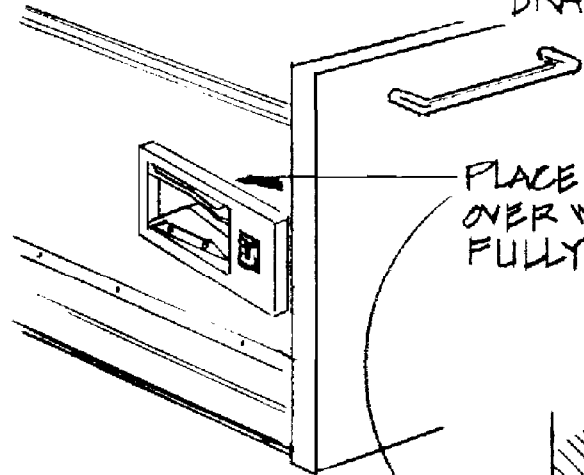



**STEP 2-**

PLACE WEDGE/PIN LOCATOR OVER WEDGES AS SHOWN AND FULLY CLOSE DRAWERS


PUSH DOWN WHILE CLOSING TO AVOID MARKING THE END PANEL (TOP VIEW)

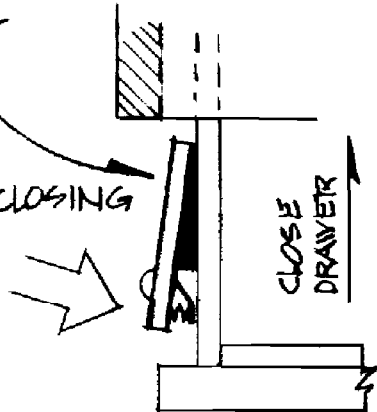

**STEP 3**  
REMOVE ALL DRAWERS FROM THE CASE, AND MOVE LOCKBAR TO THE CENTER POSITION AND INSTALL PINS AS SHOWN

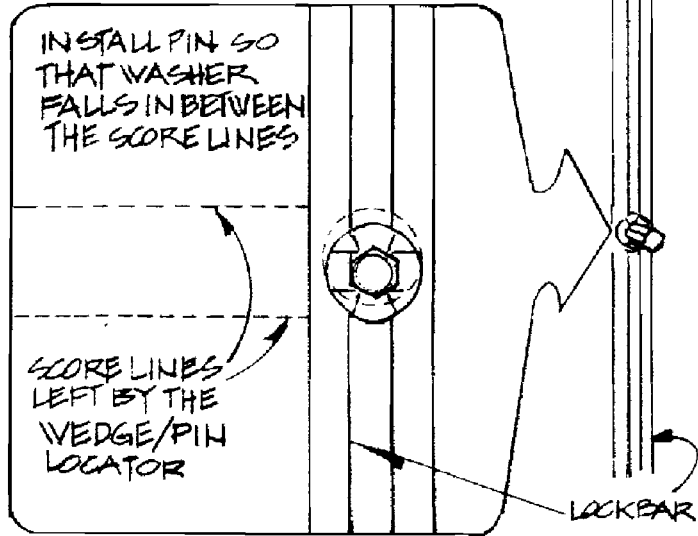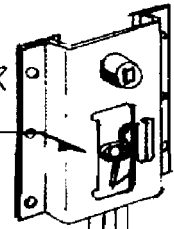

**TIP -** FOR BEST RESULTS INSTALL THE PIN SO THAT THE WASHER JUST TOUCHES THE BOTTOM SCORE LINE - THIS WILL ALLOW THE DRAWER TO SAG WITHOUT FALLING OUT OF ADJUSTMENT

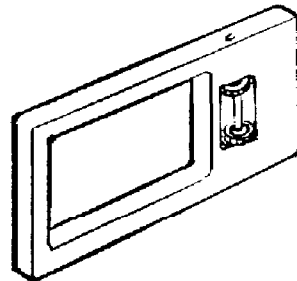

WEDGE/PIN LOCATOR

1-800-LOCKBAR/www.tlock.us  
715 Center St., Grayslake, IL 60030  
Copyright 2007 © CompX Security Products

**CompX**  
TIMBERLINE